

PIECAL 322

Automated Thermocouple Calibrator


Operating Instructions

Product Description

- **Easy to use**
With the PIECAL 322-1 you can check & calibrate all your thermocouple instruments and measure thermocouple Sensors. Automatic indication of connections on the display for simple hookups.
- **Take it without into the shop, plant or field**
Carry it without worry - it comes protected with a rubber boot and rugged, low profile switch. Easy to operate even in the dark areas of the plant with the backlit display.
- **Calibrate directly in temperature (°C & °F)**
Stop carrying around a millivolt source and thermocouple tables. The PIECAL 322-1 works with the T/Cs you use including types J, K, T & E. Easily set any value quickly to within 0.1° with the adjustable digital potentiometer "DIAL " plus store any three temperatures for instant recall with the EZ-CHECK™ switch.
- **Calibrate quickly with automatic output stepping**
Choose between 2, 3, 5, 11 and 21 steps to automatically increment the output in 100%, 50%, 25%, 10% or 5% of span. Select the step time to match your system from 5, 6, 7, 8, 10, 15, 20, 25, 30 and 60 seconds.
- **Compatible with all process instruments**
Connect directly to the thermocouple inputs of smart transmitters, PLCs, DCS and multichannel recorders and verify their outputs or displays.
- **Measure Thermocouple Sensors**
Trouble shoot sensor connections and find broken wires or high resistance junctions. Connect your sensor and the PIECAL 322 automatically measures the thermocouple in degrees C or F.



Basic Operation

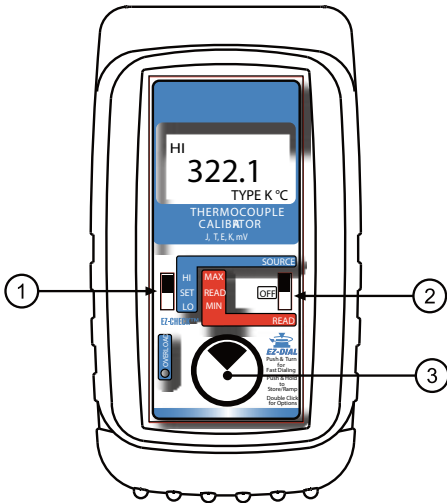

q EZ-CHECK™ SWITCH

SOURCE: Instantly output two preset thermocouple temperatures by moving the EZ-CHECK™ switch to the "LO" position or "HI" position. For fast three point checks select the "DIAL" position. The PIECAL 322-1 will remember the last "DIAL" value, even with the power off.

These values can easily be changed to suit the calibration requirements. The temperatures stored in the HI and LO positions are also used for Auto Stepping.

READ: Slide the switch to the DIAL position. The PIECAL 322-1 will display the current temperature from the thermocouple sensor. Slide the switch to HI and the highest temperature measured since turn-on or reset will be displayed; slide the switch to LO and the lowest temperature measured since turn-on or reset will be displayed.

W SOURCE/OFF/READ Switch

Select "SOURCE" to output in °C, °F, or millivolts. Select "READ" to read a thermocouple sensor or millivolts.

e EZ-DIAL™ KNOB

SOURCE: Turn the knob to adjust the output level. Turn clockwise to increase the output, counter clockwise to decrease the output in 0.1° steps at a time. Push down and turn the EZ-DIAL knob for faster dialing.

Press and hold the knob for two seconds to store desired EZ-Check™ HI/LO points in SOURCE mode. Continue to press and hold the knob for two more seconds to start the automatic ramping.

READ: Press and hold to transfer the current temperature into the EZ-Check™ HI/LO points. This resets the HI/LO temperature readings which will update as the temperature changes.

Double click the knob to get into the PIECAL 322-1 Configuration Mode. Use configuration to select °C or °F, T/C Type, Backlight On/Off, Step Size, Step Time and Auto Off On/Off.

CHANGING BATTERIES

Low battery is indicated by "BAT" on the display. Approximately one to four hours of typical operation remain before the PIECAL 322-1 will automatically turn off. To change the batteries; remove the rubber boot, remove the battery door from the back of the unit by sliding the door downward. This allows access to the battery compartment. Replace with four (4) "AA" 1.5V batteries being careful to check the polarity. Replace the battery door and replace the boot. All stored configuration options (T/C Type, EZ-CHECK Memories, etc., are reset to factory settings when the batteries are removed.

Note: Alkaline batteries are supplied and recommended for maximum battery life and performance.

Configuration

Configure the Calibrator

Move the POWER SWITCH to "SOURCE" or "READ".

MODEL 322 V#.##
DOUBLE CLICK
EZ-DIAL KNOB
FOR CONFIGURATION

Setup

Double click the EZ-DIAL KNOB at any time the unit is on and the following displays will appear for 15 seconds:

> EXIT	15
TEMP UNITS	°C
T/C	K
BACKLIGHT	ON

> EXIT	15
STEPS	3
STEP TIME	8
AUTO OFF	ON

Turn the EZ-DIAL KNOB to move through the menu. Press the EZ-DIAL KNOB to toggle between OFF and ON or to scroll through the settings.

EXIT MENU - exits this menu immediately and saves any changes. Menu will automatically exit after 15 seconds of inactivity (countdown timer is displayed).

TEMP UNITS - pressing the knob will toggle between °C and °F.

T/C - pressing the knob will cycle through T/C types J, K, T, E and mV.

BACKLIGHT - If BACKLIGHT is ON the backlight will light all the time the unit is powered up. For maximum battery life turn the backlight off when using the calibrator in areas with enough ambient light to read the display.

STEPS - pressing the knob will cycle through 2, 3, 5, 11 and 21 steps. The endpoints of the steps are based on the values stored in the HI and LO EZ-CHECK outputs.

STEP TIME - pressing the knob will cycle through 5, 6, 7, 8, 9, 10, 15, 20, 25, 30 and 60 seconds.

AUTO OFF - If AUTO OFF is ON, the unit will turn off after 30 minutes of inactivity to save battery life. If AUTO OFF is OFF the unit will stay on until the POWER SWITCH is moved to the off position.

Note: All settings are remembered even with the power off. Removing the batteries resets the values to factory defaults.

Basic Operation

Connecting the Calibrator


Thermocouple

Sourcing or reading thermocouples requires the use of thermocouple or extension grade thermocouple wire between the PIECAL 322 and the device being calibrated.

The PIECAL 322 has a female miniature thermocouple connector mounted in the top end of the housing for fast, easy connection of wires.

Millivolt

The PIECAL 322 has two banana jacks mounted in the top end of the housing. These jacks are not temperature compensated and are to be used only for generating and measuring millivolt signals.

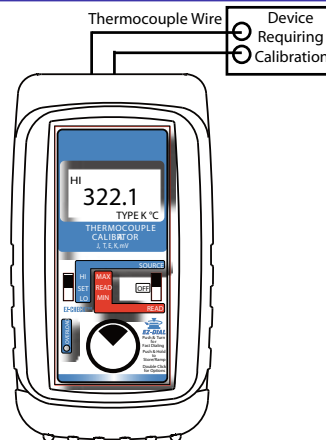

Practical Instrument Electronics

Please contact an authorized sales representative at 800-346-4620 or order at www.Instrumentation.com

Sourcing Thermocouple

SOURCE

Choose this function to provide a simulated thermocouple signal into controllers, temperature transmitters, indicators or any input devices that measure thermocouple sensors..

- 1) Disconnect the thermocouple sensor from the device to be calibrated.
- 2) Select "SOURCE" with slide switch W.
- 3) Connect a thermocouple wire (matching the type of wire to sensor being simulated) with miniature male T/C connector to the inputs of the device being calibrated, making sure to check polarity. Millivolt outputs (without cold junction compensation) may be connected with a copper (white) miniature thermocouple connector or through the banana jacks with cooper wire.

The output is adjusted in 0.1° (or 0.001 mV) increments by turning the knob e while the EZ-CHECK™ switch q is in the "HI," "LO" or "SET" position. Press and turn the knob for faster dialing with 10° (or 0.100) increments.

The OVERLOAD indicator will light if excessive voltage or current is detected by the calibrator.



Reading Thermocouple Sensors

READ

Choose this function to measure temperatures with a thermocouple probe or sensor.

- 1) Disconnect the thermocouple sensor from any other device.
- 2) Select "READ" with slide switch W.
- 3) Place the EZ-CHECK switch into the READ position.
- 4) Connect a thermocouple probe (matching the type of wire to sensor being measured) with miniature male T/C connector to the sensor, making sure to check polarity. Millivolt outputs (without cold junction compensation) may be connected with a copper (white) miniature thermocouple connector or through the banana jacks with cooper wire.

The PIECAL 322 measures the temperature signal and constantly updates the display with the current temperature reading. Move the EZ-CHECK switch to MAX to see the highest temperature reading and to MIN to see the lowest temperature reading. Press and hold the knob e to clear the MAX and MIN readings.

The OVERLOAD indicator will light if excessive voltage or current is detected by the calibrator.

Storing EZ-CHECK Outputs

STORING HI and LO EZ-CHECK Outputs

Choose this function to provide a simulated thermocouple signal into controllers, temperature transmitters, indicators or any other input device that measure thermocouple sensors.

- 1) Store your high (SPAN) output temperature by moving the EZ-CHECK switch to the HI position and turn the \ominus EZ-Dial knob until the desired temperature is on the display. Press and hold the EZ-Dial knob until STORED appears to store the value. Release the EZ-Dial knob.
- 2) Store your low (ZERO) output temperature by moving the EZ-CHECK switch to the LO position and turn the \ominus EZ-Dial knob until the desired temperature is on the display. Press and hold the EZ-Dial knob until STORED appears to store the value. Release the EZ-Dial knob.
- 3) Instantly output your SPAN and ZERO temperature outputs by moving the EZ-CHECK switch between HI and LO. You may also select any third temperature output (such as mid-range) using the SET position on the EZ-CHECK switch.

Automatic Stepping

To change the Automatic Stepping settings

Double click the \ominus DIAL KNOB at any time the unit is on and the following display will appear for 30 seconds:

Turn the \ominus DIAL KNOB to move through the menu. Press the \ominus DIAL KNOB to toggle between OFF and ON or to change the STEPS and the STEP TIME settings. These settings are remembered even with the power off.

EXIT	15
> STEPS	3
STEP TIME	8
AUTO OFF	ON

EXIT MENU - exits this menu immediately and saves any changes. Menu will automatically exit after 30 seconds of inactivity.

STEPS - pressing the knob will cycle through 2, 3, 5, 11 and 21 steps then reverse direction. The endpoints of the steps are based on the values stored in the HI and LO EZ-CHECK outputs.

2 steps will automatically switch between the values stored in the HI & LO EZ-CHECK (0 & 100%).

3 steps between the HI, Midpoint and LO EZ-CHECK (0, 50 & 100%).

5 steps between the HI and LO EZ-CHECK in 25% increments (0, 25, 50, 75 & 100%).

11 steps between the HI and LO EZ-CHECK in 10% increments (0, 10, 20...80, 90 & 100%).

21 steps between the HI and LO EZ-CHECK in 5% increments (0, 5, 10... 90, 95 & 100%).

STEP TIME - pressing the knob will cycle through 5, 6, 7, 8, 9, 10, 15, 20, 25, 30 and 60 seconds.

To start Automatic Stepping

Start automatic stepping or ramping by placing the EZ-CHECK Switch into the HI or LO position then press and hold the \ominus DIAL KNOB for 6 seconds (the word STORE will appear on the display after 3 seconds - continue to press the DIAL KNOB) until the word STEPPING appears on the display. The word STEPPING will appear on the display anytime the selected automatic function is running. Stop the stepping by again pressing and holding the \ominus DIAL KNOB for 3 seconds.

Ranges & Accuracies

T/C Type	Degrees C Range	Accuracy	Degrees F Range	Accuracy	T/C Material	ISA/ANSI Color
J	-200.0 to -180.0	±0.3°	-346.0 to -292.0	±0.5	+Iron	White
	-180.0 to -50.0	±0.2°	-292.0 to -58.0	±0.4	-Constantan	Red
	-50.0 to 500.0	±0.1°	-58.0 to 932.0	±0.2	Jacket	Black
	500.0 to 1200.0	±0.2°	932.0 to 2192.0	±0.4°		
K	-230.0 to -100.0	±0.6°	-382.0 to -148.0	±1.1°	+ Chromel©	Yellow
	-100.0 to 1050.0	±0.2°	-148.0 to 1922.0	±0.4°	-Alumel©	Red
	1050.0 to 1371.1	±0.3°	1922.0 to 2500.0	±0.5°	Jacket	Yellow
T	-260.0 to -200.0	±1.0°	-436.0 to -328.0	±1.8°	+Copper	Blue
	-200.0 to -50.0	±0.5°	-328.0 to -58.0	±0.9°	-Constantan	Red
	-50.0 to 0.0	±0.2°	-58.0 to 32.0	±0.4°	Jacket	Blue
	0.0 to 400.0	±0.1°	32.0 to 752.0	±0.2°		
E	-240.0 to -200.0	±0.4°	-400.0 to -328.0	±0.7°	+Chromel	Purple
	-200.0 to -100.0	±0.2°	-328.0 to -148.0	±0.4°	-Constantan	Red
	-100.0 to 850.0	±0.1°	-148.0 to 1562.0	±0.2°	Jacket	Purple
	850.0 to 1000.0	±0.2°	1562.0 to 1832.0	±0.4°		

Accessories

T/C Wire Kit 1 for Types J, K, T & E

Part No. 020-0202

Three feet (1 meter) of T/C extension wire, stripped on one end with a miniature T/C male connector on the other end.

Standard Test Leads

Part No. 020-0207

Three feet (1 meter) of wire with an alligator clip on one end and a spring loaded protected banana plug on the other end.

Ni-MH 1 Hour Charger w/4 Ni-MH AA Batteries (100-120 V AC input for North America Only)

Part No. 020-0103

Warranty

Our equipment is warranted against defective material and workmanship (excluding batteries) for a period of three years from the date of shipment. Claims under warranty can be made by returning the equipment prepaid to our factory. The equipment will be repaired, replaced or adjusted at our option. The liability of Practical Instrument Electronics (PIE) is restricted to that given under our warranty. No responsibility is accepted for damage, loss or other expense incurred through sale or use of our equipment. Under no condition shall Practical Instrument Electronics, Inc. be liable for any special, incidental or consequential damage.

Practical Instrument Electronics

Please contact an authorized sales representative at 800-346-4620 or order at www.Instrumentation.com

PIECAL 322-I Specifications

(Unless otherwise indicated all specifications are rated from a nominal 23 °C,
70 % RH for 1 year from calibration)

General	
Accuracy	$\pm(0.008\% \text{ of Reading} + 0.006 \text{ mV})$
Millivolt Range	-13.000 to 80.000 mV
Cold Junction Compensation	$\pm 0.1^\circ\text{F}$ ($\pm 0.06^\circ\text{C}$)
Operating Temperature Range	-25 to 60 °C (-10 to 140 °F)
Relative Humidity Range	10 % \leq RH \leq 90 % (0 to 35 °C), Non-condensing
	10 % \leq RH \leq 70 % (35 to 60 °C), Non-condensing
Size	L=5.63 x W=3.00 x H=1.60 inches
Weight	12.1 ounces (including boot & batteries)
Batteries	Four "AA" Alkaline 1.5V (LR6)
Battery Life	50 Hours
Optional NiMh Rechargeable battery kit	120 VAC for North America Only; charger, four NiMh batteries, AC & DC cords [Part # 020-0103]
Low Battery	Low battery indication with nominal 1 hour of operation left
Protection against misconnection	Over-voltage protection to 60 V dc (rated for 30 seconds)
Display	High contrast graphic liquid crystal display. LED backlighting for use in low lit areas.

Read	
Input Impedance	> 10 Megohms
Open Thermocouple Threshold Pulse	10,000 Ohms nominal < 10 microamp pulse for 300 milliseconds
Normal Mode Rejection	50/60 Hz, 50 dB
Common Mode Rejection	50/60 Hz, 120 dB

Source	
Output Impedance	< 0.3 Ohms
Source Current	> 20 mA (drives 80 mV into 10 Ohms)
Noise	≤ 4 microvolts p-p for frequencies of 10 Hz or below

Additional Information

This product is calibrated on equipment traceable to NIST and includes a Certificate of Calibration. Test Data is available for an additional charge.

Practical Instrument Electronics recommends a calibration interval of one year. Contact your local representative for recalibration and repair services.

[Practical Instrument Electronics](http://www.practicalinstrumentelectronics.com)

Please contact an authorized sales representative at 800-346-4620 or order at www.Instrumentation.com

Your Authorized Representative for PIE:

Shelby Jones Co

8800 W Chester Pike Upper Darby, PA 19082

610-446-6600 or Toll Free 800-346-4620

www.Instrumentation.com