


THERMOCOUPLE MINI-GRABBER



Standard Features

- Available In All ASTM Base Metal Thermocouple Types
- Allows Fast Simple Connections To Bare Thermocouple Wires
- Eliminates Multiple Cold End Junctions
- Thermocouple Material From The Tip To The Mini-Plug
- Available With Convenient Coil Cords
- Recommended For Use With EDL's LT-100 Thermocouple Reference Instrument

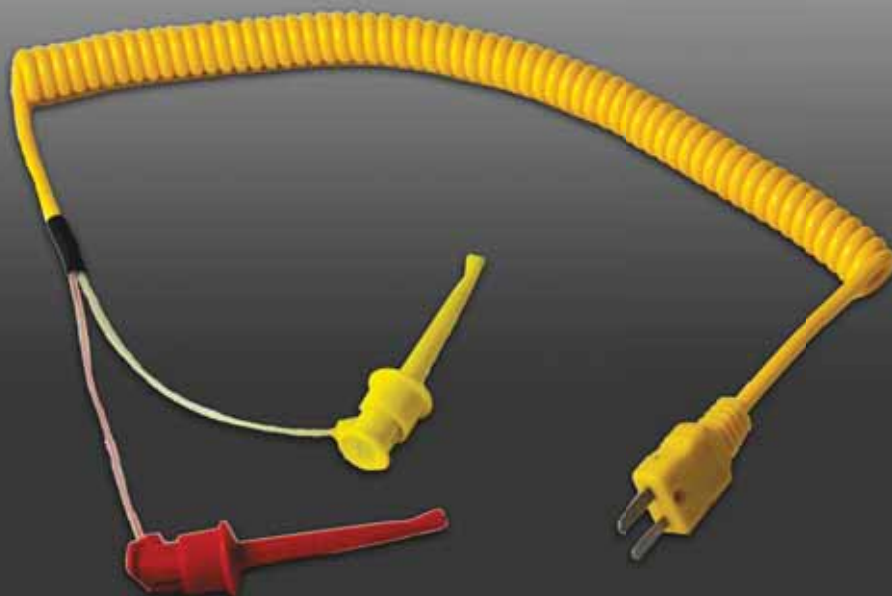

THERMOCOUPLE MINI-GRABBER

Compensated Thermocouple Connector

Thermocouple compensated Mini-Grabbers provide a continuous thermocouple connection from bare wires to the measuring instrument without attaching plugs. These connectors will save time and improve the accuracy of your measurement. Stop making thermocouple measurements with copper connections.



Thermocouple Type K



Thermocouple Type J



Thermocouple Type E



Thermocouple Type T



Thermocouple Type N



Uncompensated Cu/Cu
Copper/Copper

EDL Mini-Grabbers are ordered by part #. The numbering system listed below is designed so you can easily identify the thermocouple type, lead type, lead length, and termination.

Mini-Grabber Part # Example

Mini-Grabber – Type K – Coil Cord – 1' Lead – w/ Mini-plug Termination

MG - K - C - I - M

TC Type – Lead Type – Lead Length – Termination

MG	TC Type	Lead Type	Lead Length	Termination
MG -	E	C = Coil Cord	1 = 1'	M = Miniplug
	J	T = TFE/TFE	3 = 32"	J = Minijack
	K			L = Standard Plug
	T			U = Unterminated
	*N			
	CU			
	SET			

Base Price: \$59.00


Add: \$10.50 for L (Standard Plug)
Add: \$20.00 for a 32" Lead Length
*Add: \$24.00 for TC Type N

Standard Features

- Thermocouple Material From The Tip To The Mini Plug
- Available With Convenient Coil Cords
- Available In All ASTM Base Metal Thermocouple Types
- Allows Fast Simple Connections To Bare Thermocouple Wires
- Ideal For Connecting Thermocouple Wires Inside Process Connection Heads
- Recommended For Use With EDL's High Precision Thermocouple Reference Instrument — LT-100
- Eliminates Multiple Cold End Junctions
- Also Available In Copper/Copper

Available Individually or as Base Metal Complete Set.
Set Includes Types K, J, T, & E
Part # MG-SET-C-I-M
\$236.00

Mini-Grabber being used with EDL's LT-100 Reference Instrument. Attached to Terminal Block inside a Thermowell head.

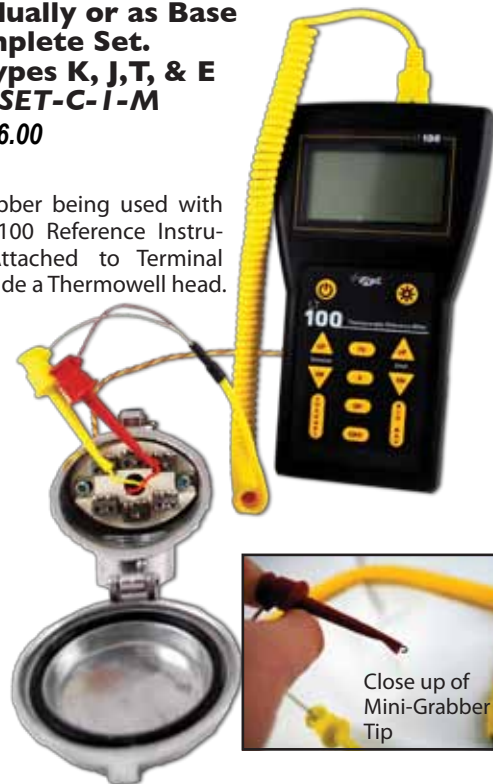

Close up of Mini-Grabber Tip

Your Electronic Development Labs, Inc. Distributor is:



The Temperature People® Since 1943
Electronic Development Labs, Inc.