

Additel 937

Hydraulic High Pressure Calibration Pump



- Generate 85% vacuum to 15,000 psi (1,000 bar) pressure
- Compatible to phosphoric acid ester fluid and Skydrol Oil
- Increase and decrease pressure smoothly
- Three pressure ports
- Hand-tight quick connectors



OVERVIEW

The 937 Hydraulic High Pressure Calibration Pump is a hand operated pressure pump designed for calibrating pressure measuring instruments with phosphoric acid ester fluid and Skydrol oil in the range from 85% vacuum to 15,000 psi (1000 bar). With the patented screw press technology, high pressures can be easily generated, increased and decreased smoothly. A specially designed shut-off valve makes the pressure as stable as possible during calibration. With no check valve (non-returning valve), the 937 avoids the troublesome leakage issues that is usually experienced with hand pumps and allows for minimal maintenance. Two hand-tight quick connectors installed on the pump allow easy connecting and disconnecting to the test pump without the need for PTFE tape or wrenches. The 937 is an ideal comparison test pump for calibrating pressure measuring instruments such as test gauges, indicators or transducers in the laboratory.

FEATURES


- **High Pressure**
Generates pressure up to 15,000 psi (1,000 bar)
- **Durable and Minimal Maintenance**
Patented screw press technology, with no check valve (non-returning valve) inside that is usually used on troublesome hand pumps causing leakage.
- **Easy-to-use**
High pressures can be generated easily, as well as increased and decreased smoothly.
- **Hand-tight Quick Connectors**
Allows easy connecting and disconnecting to the test pump without the need for PTFE tape or wrenches.

SPECIFICATIONS

- **Media:** Oil, compatible to phosphoric acid ester fluid and Skydrol Oil
- **Pressure Range**
85% vacuum to 15,000 psi (1,000 bar) positive.
- **Material:** Ram/adapters: SS
Body: SS/aluminum
Seals: FKM
- **Connection**
Hand-tight connectors for both test gauge and reference gauge(s).
Test Gauge Connection: 1/4NPT female, 1/4BSP female, or M20X1.5 female
Reference Gauge Connection: 1/4NPT female, 1/4BSP female, or M20X1.5 female
- **Dimensions**
Height: 9.1" (230 mm)
Base: 20.5" (520 mm) x 14.2" (360 mm)
- **Weight:** 35.2 lb (16 kg).
- **Warranty:** 1 year

ORDERING INFORMATION

Model Number

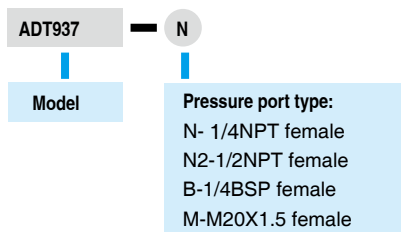

Accessories included

O-ring: 20 pcs Manual: 1 pc

Optional Accessories

Model number	Description
ADT102	Adapters and fittings, 1/4NPT male to various male and female connection (25 pcs). More information shown on page 53.
ADT103	Adapters and fittings, 1/4NPT (1/4BSP, or M20X1.5) male to various female hand-tight quick connectors (10 pcs). More information shown on page 54.
9908	Carrying case for 936, 937, 938 or 949.
ADT937-MK	Maintenance kit for Additel 937 pump