

Part No.

# DPOV-2FBA-RG

*DPOV (100 psi / 7 bar) pump, 1/4" female BSPP gauge adapter, 1m hose, 1/4" female BSPP process conn.*

Perform very precise low pressure calibration or differential pressure calibration using an attached gauge or calibrator (gauge and calibrator not included)

## Features


- Light weight, compact pump generates up to 125 psi (8.6 bar) with ease
- Large volume fine adjustment piston provides precise control, even at very low pressures
- Modular design makes field maintenance quick and easy
- Precisely vent pressure with soft seated bleed valve
- Two outlet ports provide connections for both pressure reference and for device under test thus eliminating a tee
- Low volume Quick-test hose, gauge adapter and process connection can be attached to pump without thread sealant or a wrench
- Rugged, all metal construction reduces pressure changes due to temperature fluctuations
- Made in U.S.A.

## Item Includes

- Hand Pump - DPOV Assembly (DPOV)
- Gauge Adapter - G 1/4" female BSPP (ISO 228/1) x female Quick-test, no check-valve, brass (QTHA-2FBA-RG)
- Hose - Quick-test 6900 psi hose, brass hose ends, 1 m (3.3 ft) long (QTQT-HOS-1m)
- Hose Adapter - G 1/4" female BSPP (ISO 228/1) x male Quick-test, no check-valve, brass (QTHA-2FB0-RG)

## Specifications

Pressure Range	0 to 125 psi (0 to 9 bar)
Media	Air
Outlet Port1	Male Quick-test outlet port, no check-valve, brass
Outlet Port2	Male Quick-test outlet port with cap and chain, brass
Temperature Range	0 to 130 °F (-18 to 54 °C)
Construction	Anodized Aluminum, Brass, Stainless Steel
Seal Materials	Buna-N, Delrin, Teflon
Fine Adjust Resolution	±0.01 psi

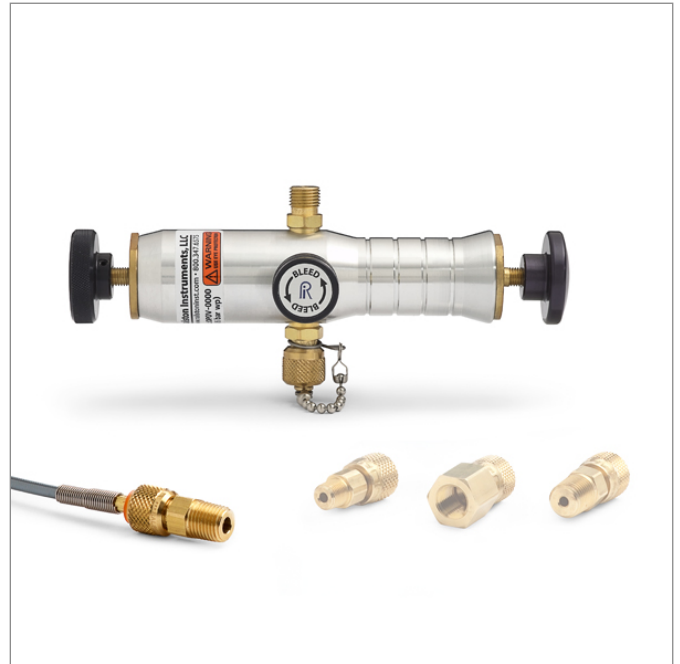

DPOV-2FBA-RG