

Part No.

DV0V-2MBA

DV0V (25"Hg / 650 mm Hg Vac) pump, 1/4" male NPT gauge adapter, 3ft hose, 1/4" MNPT process conn.

Pull a vacuum and calibrate vacuum gauges, transmitters or switches by attaching a gauge or pressure calibrator (gauge and calibrator not included)

Features


- Light weight, compact pump generates 23 inHg (584mm Hg) vacuum with ease
- Large volume fine adjustment piston provides precise control, even at very low vacuums
- Modular design makes field maintenance quick and easy
- Precisely vent pressure with soft seated bleed valve
- Two outlet ports provide connections for both pressure reference and for device under test thus eliminating a tee
- Low volume Quick-test hose, gauge adapter and process connection can be attached to pump without thread sealant or a wrench
- Rugged, all metal construction reduces pressure changes due to temperature fluctuations
- Made in U.S.A.

Item Includes

- Hand Pump - DV0V Assembly (DV0V)
- Gauge Adapter - 1/4" male NPT x female Quick-test, no check-valve, brass (QTHA-2MBA)
- Hose - Quick-test 6900 psi hose, brass hose ends, 3 ft (92 cm) long (QTQT-HOS-3ft)
- Hose Adapter - 1/4" male NPT x male Quick-test, no check-valve, brass (QTHA-2MB0)

Specifications

Vacuum Range	0 to 23"Hg (0 to 584 mmHG)
Media	Air
Outlet Port1	Male Quick-test outlet port, no check-valve, brass
Outlet Port2	Male Quick-test outlet port with cap and chain, brass
Temperature Range	0 to 130 °F (-18 to 54 °C)
Construction	Anodized Aluminum, Brass, Stainless Steel
Seal Materials	Buna-N, Delrin, Teflon
Fine Adjust Resolution	±0.01 psi
Weight	1.6 lb (0.7 kg)
Dimensions	H: 2.88 in (7.3152 cm) x W: 7.93 in (20.1422 cm) x D: 3.5 in (8.89 cm)

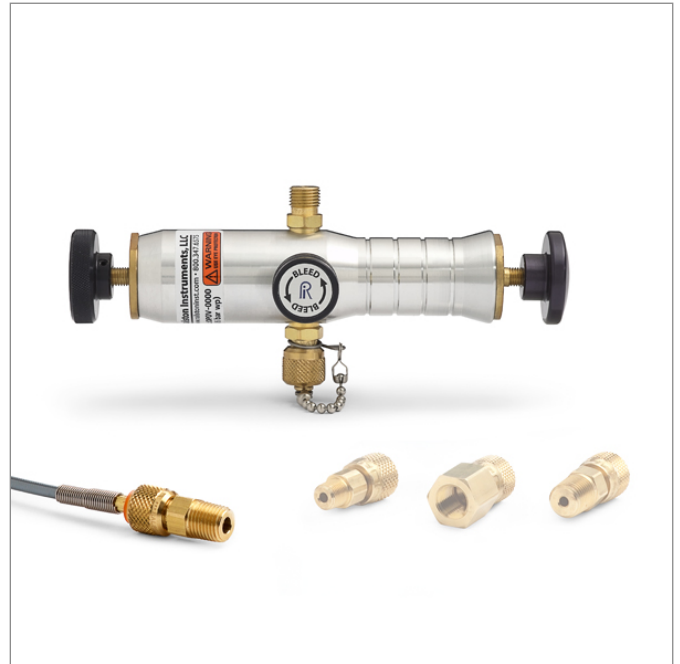

DV0V-2MBA